


## Maco Tech 100 Brake Stay and Restrictor

For Outwards Opening Door Restriction up to 90°



### Installation

1. Position the Tech 100 stay onto the head of the door sash 105mm from the sash rebate corner on the hinge side.

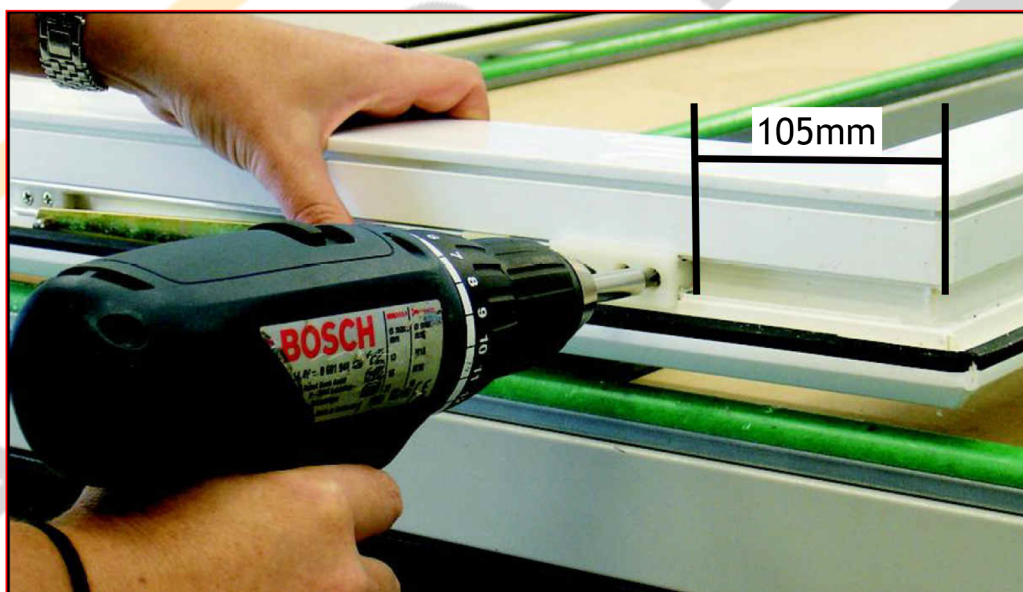

2. Position the striker plate behind the bead groove on the outer frame 45mm from the corner and screw into position.

